

a Device Marker Icon
This is the icon that is associated with a device. This will be the icon representing the device on the map. (You can change your icon in the setting menu).

b Device Nickname
This is the nickname chosen for your device, which will appear in notifications. (You can change it in the setting menu).

c Update Location Button
Updates the device location.

d Make ring the device
This button sends a command to make ring the device. Once the device receives it, the alarm will be heard. (You can change the alarm sound in the setting menu).

e Setting menu button
This button will take you to the next window, where you can customize your device.



f Setting menu
This button will let you to choose or change your marker icon, your device nickname and your alarm sound, in a easy way.



g Make ring the device
This button sends a command to make ring the device. Once the device receives the command, the alarm will be heard.

h Monitor in real time
Get the device location every 3 minutes, during the time you need to.

i Route to the object
If you want to join your object, this button will show you the fastest road to your asset.

j Monitoring modes
This button will let you to choose the monitoring mode more covenant to your asset.

k View History button
You can select the date and look the device history on the map or in a list.

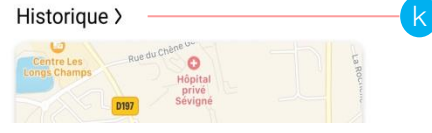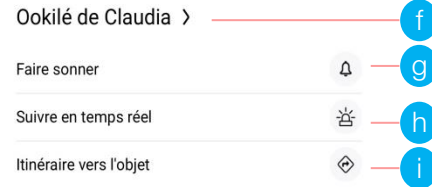



Monitoring Modes

This button will let you to choose the monitoring mode more covenant to your asset.

There are four main modes:

- Locate at a regular frequency.
- Supervise the position.
- Locate on demand only.
- Monitor the movements of an asset.



Réglages

LOCALISER TOUTES LES 1h **m**

Plus la fréquence est élevée, plus le tracker consomme.
Autonomie max. pour ce réglage: ± 5 jours **n**

ENVOYER TOUTES LES POSITIONS **o**

Pour économiser la batterie, seules les positions qui changent, lorsque le tracker est en mouvement, sont envoyées.

NOTIFIER Toutes les positions **p**

Une notification peut être envoyée au téléphone lorsqu'une nouvelle position est disponible.

PAS DE NOTIF. À PROXIMITÉ DE VOUS **q**

Si le tracker est dans un rayon inférieur à 30m. de votre mobile, vous êtes probablement au courant de sa localisation.

CONSERVER LES DONNÉES Trois mois **r**

Les données de localisations permettent de retracer le dernier chemin effectué par un objet perdu. Supprimez les données ou modifiez les durées d'affichage et de conservation à tout moment dans l'historique de ce tracker.

[TERMINER](#)

m Monitoring time

This button allows you to set the location time of the device

n Device autonomy

Get the number of days of device autonomy. *Higher is the frequency, higher is the battery consumption.

o Send all positions

You can choice to get all the positions of the device even if it is the same, or get the position just when it moves.

p Notifications

You can get a notification every time there is a new position.

q No notifications next to you

If the device is close to you less than 30 meters, you know probably the position of your asset and you may not need a notification.

r History time

You can select the time you want to keep the device history.

